

NIFTYLIFT SETUP INSTRUCTIONS

If you are having operational problems please use this checklist before you call. We charge for service calls if the operator fails to follow operating instructions and no problem is found with machine.

TO START MAKE SURE RED E STOP BUTTON (RIGHT SIDE ON ENGINE COVER) IS PULLED OUT AND THE KEY IS IN ON POSITION

ON SAME SIDE IN FRONT OF BASKET MAKE SURE E STOP BUTTON IS PULLED OUT AND BUTTON IS IN(O) POSITION

ENTER BASKET AND MAKE SURE RED E STOP BUTTON IS PULLED OUT

START ENGINE WITH KEY SWITCH BOTTOM ROW NEXT TO LAST BUTTON DURING COLD WEATHER TURN AND HOLD KEY TO THE GLOW POSITION FOR 30 SECONDS BEFORE TURNING TO RIGHT TO START ENGINE

TURN OPERATION SWITCH (RIGHT SIDE OF THE BASKET TO DRIVE POSITION (DOWN POSITION)

DRIVE MACHINE BY DEPRESSING FOOT SWITCH AND T HANDLE ON RIGHT SIDE OF BASKET

DEPRESS FOOT PEDAL AND SET OUTRIGGERS BY OPERATING THE FOUR LEVRS ON RIGHT SIDE BY BASKET

TO USE BOOM CONTROLS TURN OPERATION SWITCH ON RIGHT SIDE OF BASKET TO UP POSITION DEPRESS FOOT SWITCH. THE BOOM CONTROLS ARE CENTER OF BASKET

THE MAJORITY OF ALL SERVICE CALLS ARE DUE TO THE OUTRIGGERS NOT BEING FULLY LOWERED. THIS MACHINE WILL NOT OPERATE UNTIL ALL OUTRIGGERS ARE FIRMLY DOWN AND ON SOLID SURFACE

AFTER OUTRIGGERS ARE FIRMLY SET THE BOOM CONTROLS ON BASKET WILL BE OPERATIONAL

WHEN MOVING MACHINE THE BOOM MUST BE STOWED IN TRAVEL POSITION AND IN ITS CRADLE. THE MACHINE WILL GO INTO LOCKUP IF YOU ATTEMPT TO MOVE IT WITHOUT PUTTING IT IN ITS CRADLE (TRANSPORT POSITION)